 
 


## Installation Guide


1. Load file „free\_at\_home\_Firmware\_Update\_VX\_X.zip“ from the e-Catalogue and save in on your desktop.
2. Unpack the .zip folder.
3. Connect your PC with the System Accesspoint.

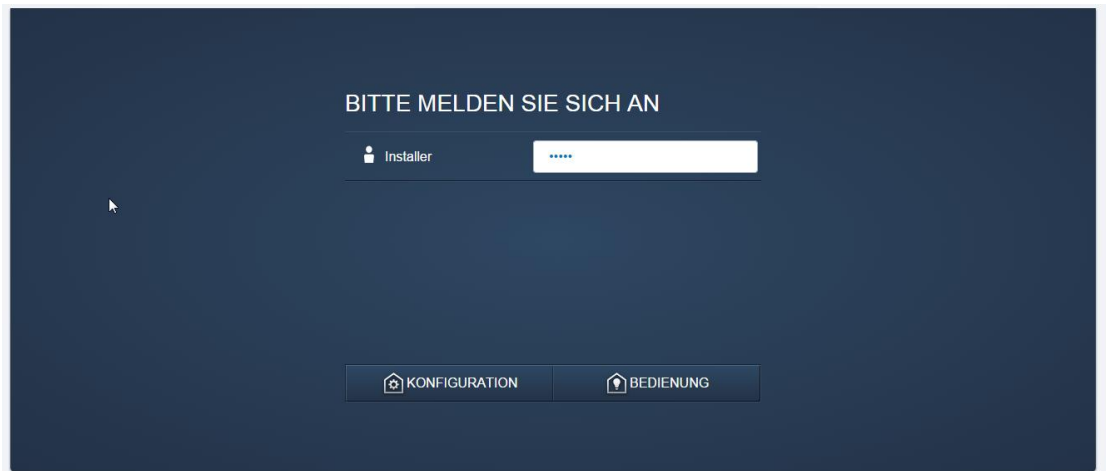

4. Navigate to -> Settings -> Update -> „Upload Firmware“ and select file „sysap-update-XXXXXXXX-X.X.X-XXX.img“ out of the unpacked .zip file. Confirm dialogue with „open“.

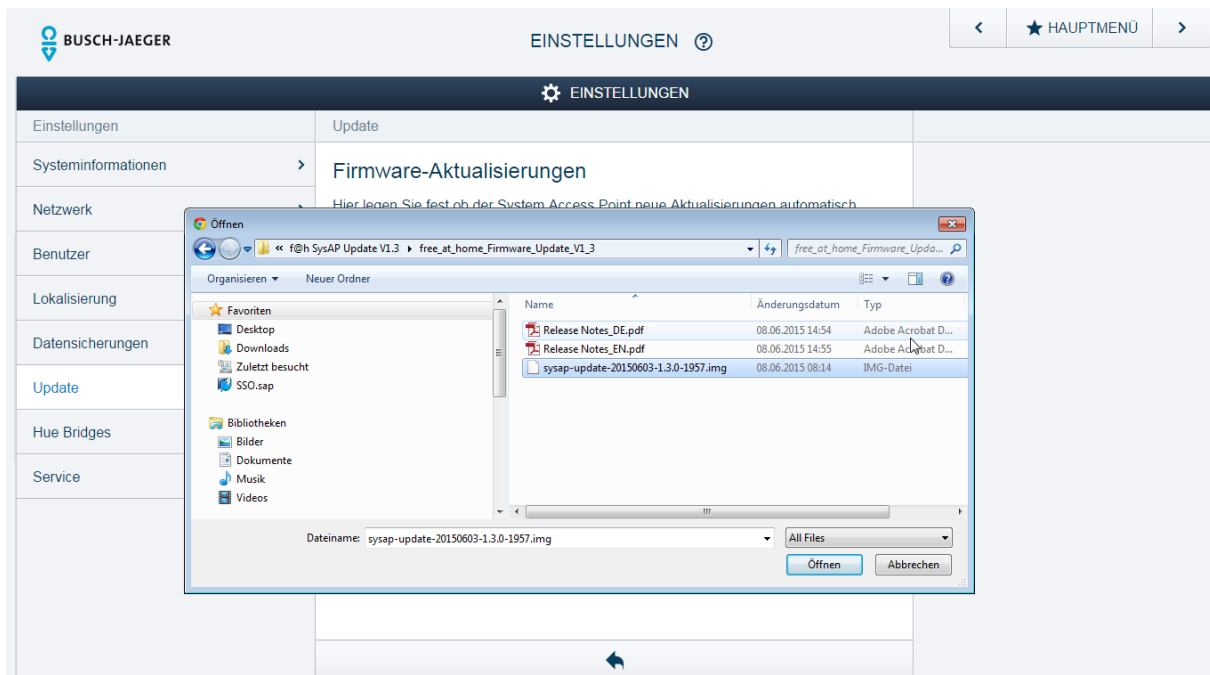

- Depending on connection quality the upload may take a few minutes.

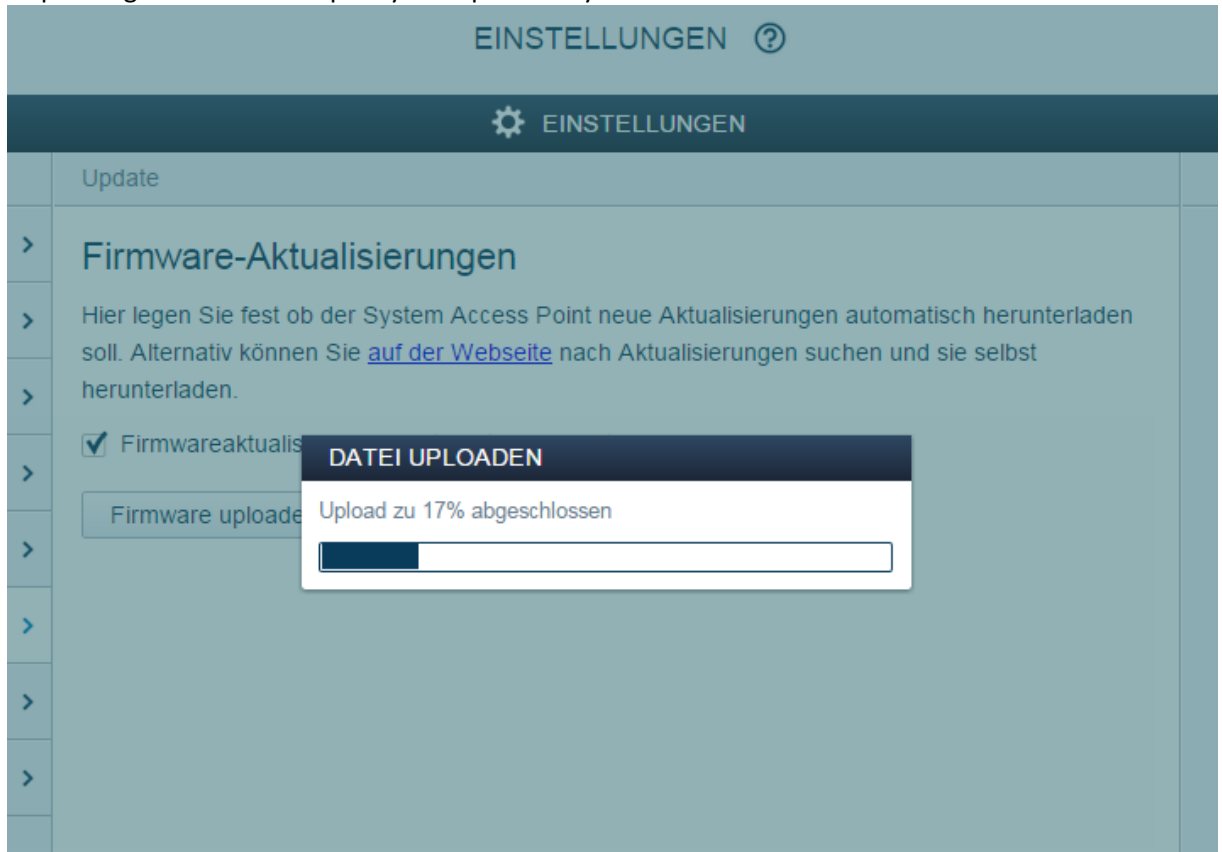

- After successfully uploading the file will be checked and processed. Again, this will take a few minutes.
- Confirm the following dialogue with „✓“.



- While the update itself is running, the LED's of the system accesspoint are flashing. The User Interface is offline during that time. After ca. 10min. the update will be finished, the LED's will return to their previous state and the User Interface is online again.
- Log in to the user Interface.